



Power will flow from 85 to 86 then ground if activate the coil.
 Power will flow from 30 to 87A when it is not activated.
 Power will flow from 30 to 87 when it is activated.

Relay	Terminal / Wire Number				
PARK BRAKE	86 / BLK	85 / 129	87 / 30	30 / 89	
HEADLIGHTS	86 / BLK	85 / 26	87 / 3	30 / 6	
MAIN LIGHTING	86 / BLK	85 / 8	87 / 7	30 / 2	
RIGHT TURN	86 / BLK	85 / 28	87 / 84	30 / 86	
LEFT TURN	86 / BLK	85 / 27	87 / 85	30 / 86	

TRANSMISSION SWITCH
 Manual - on top
 Auto - on left side

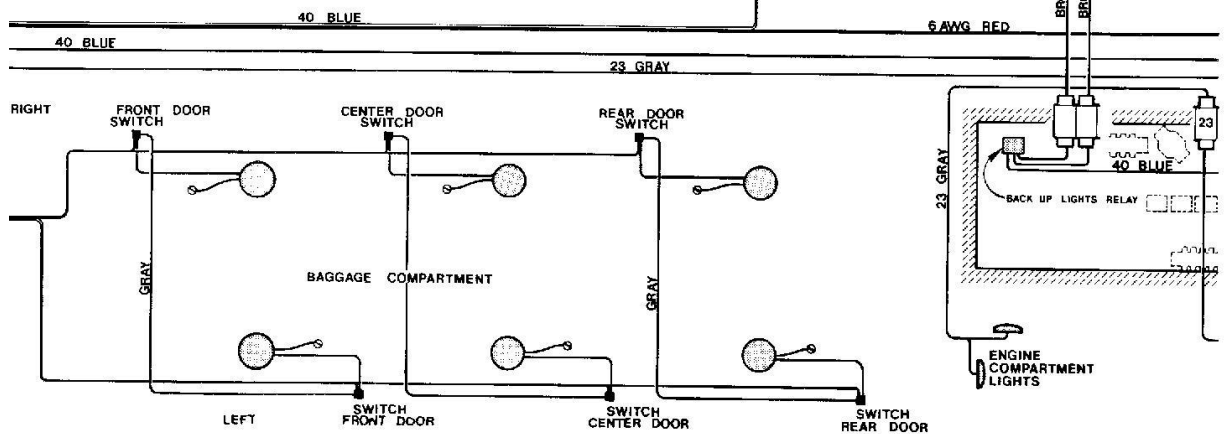



REAR CLEARANCE LIGHTS

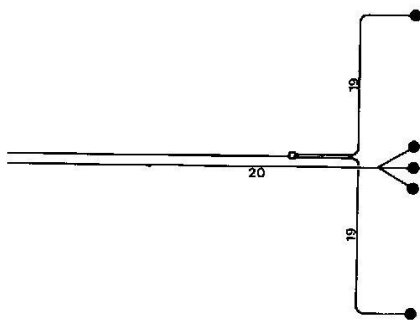

10D-11

EXTERIOR LIGHTS LAYOUT

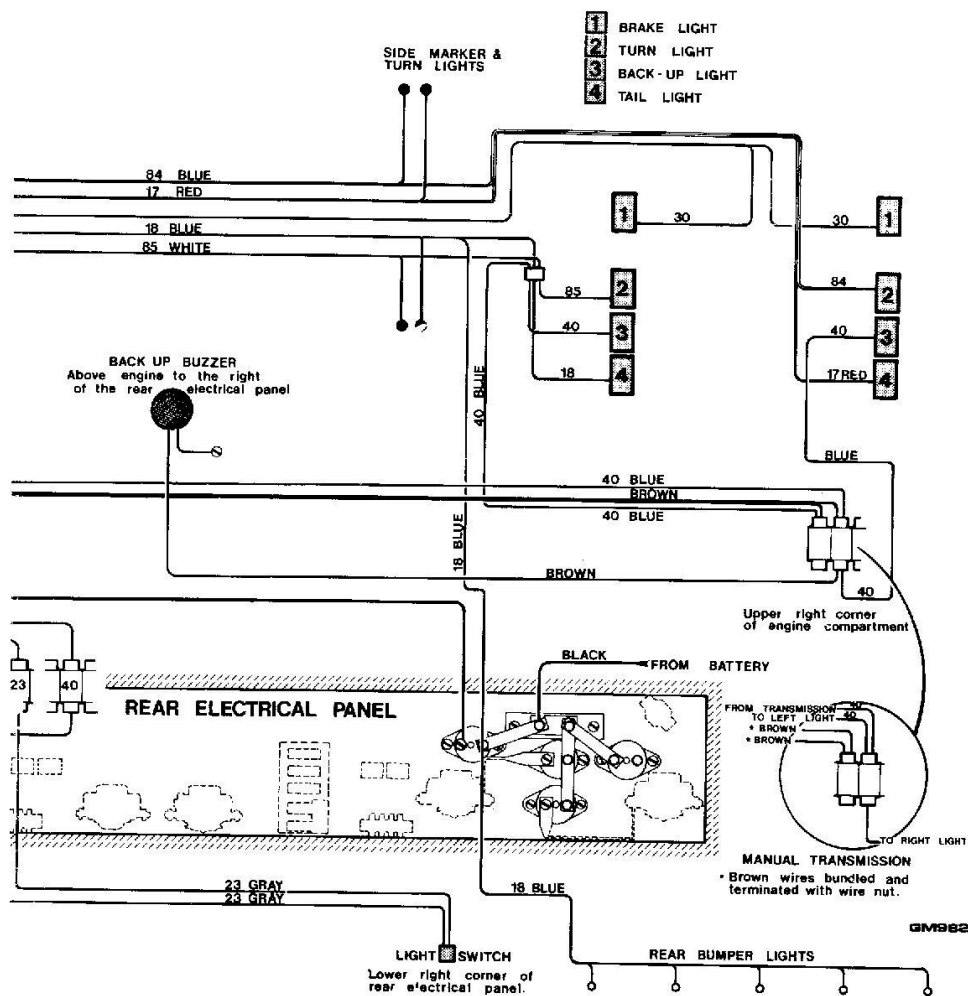

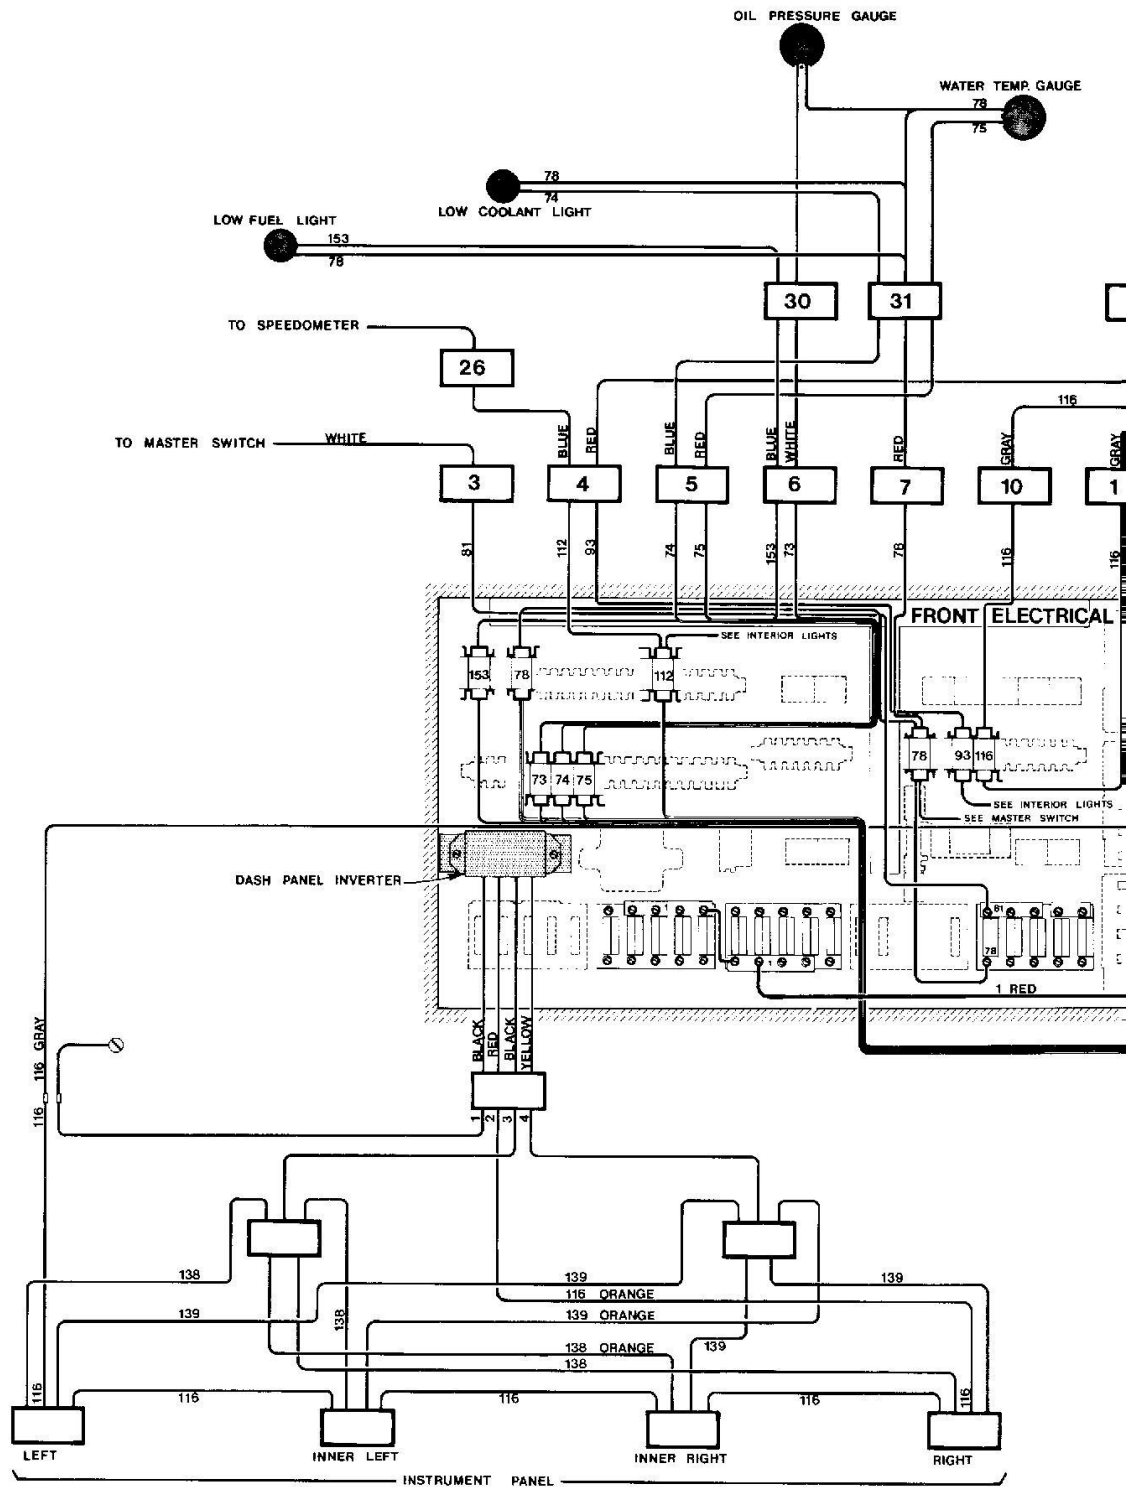

INTENSITY SWITCH

ANEL

TO MA
Right side

REAR ELECTRICAL PANEL

FROM REAR ELECTRICAL PANEL


74 BLUE
78 RED
LOW COOLANT SENSOR
SEE MASTER SWITCH LAYOUT.


73 WHITE


OIL PRESSURE SENSOR
Left side of engine compartment

153 BLUE
78 RED
LOW FUEL SENSOR
Right tank behind bogie axle.



INDICATOR LIGHTS & SYSTEMS II
LAYOUT

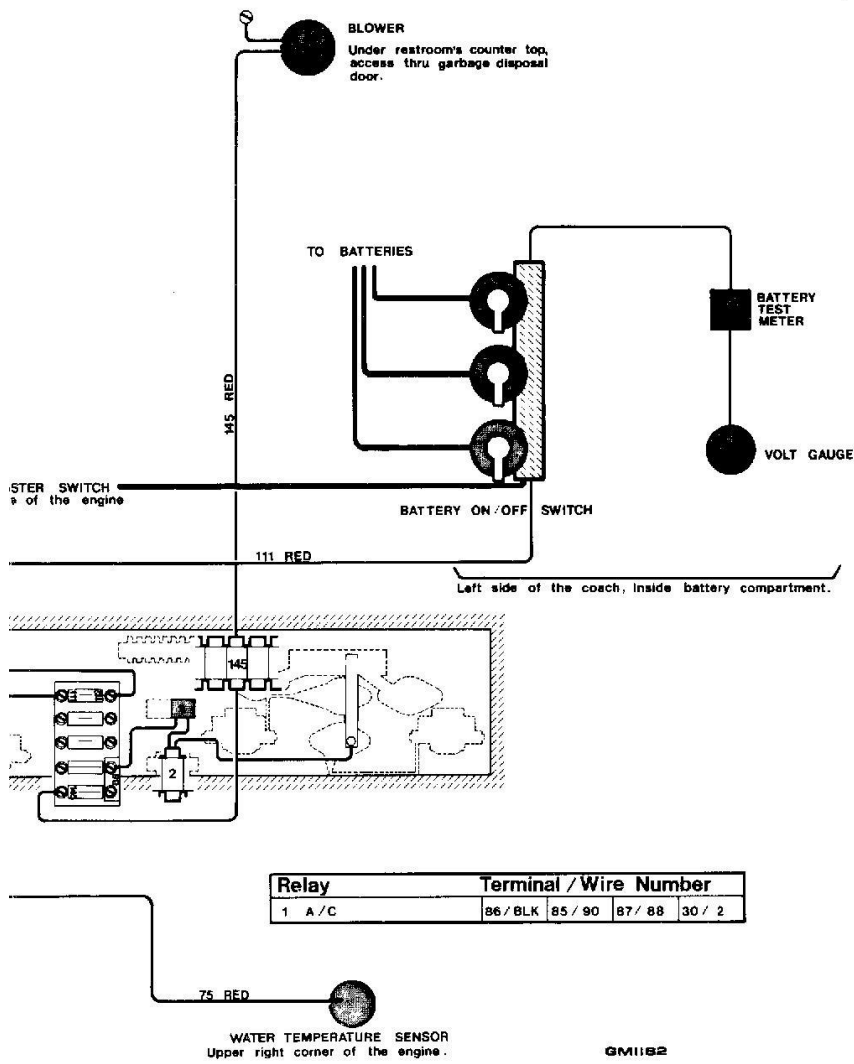

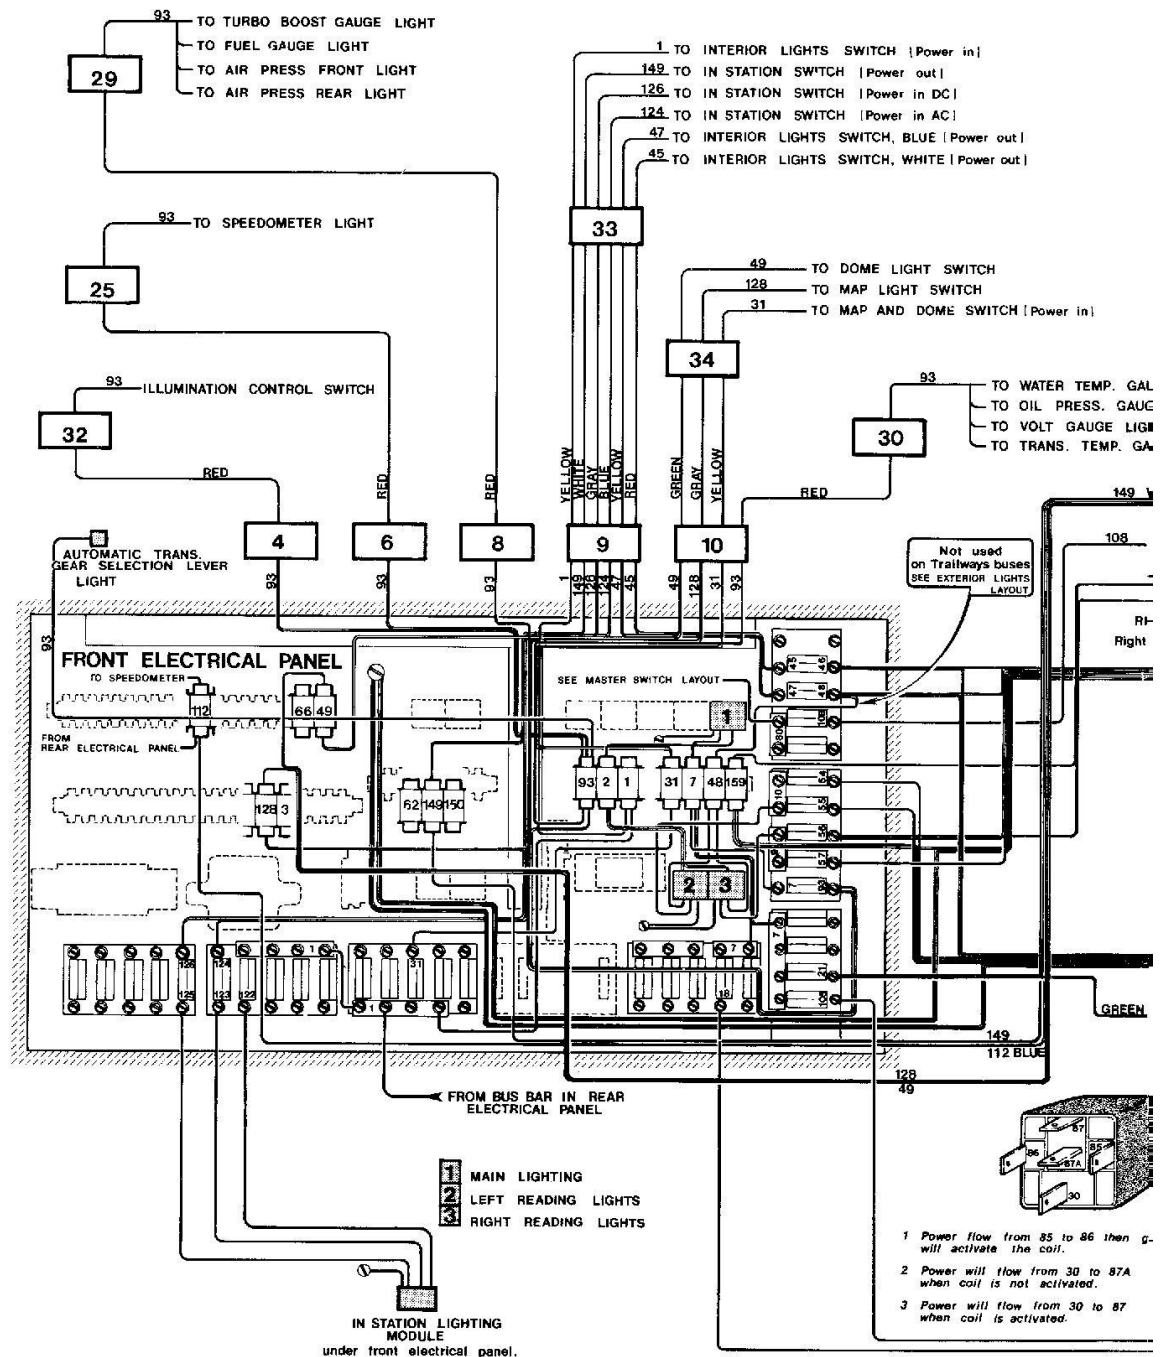


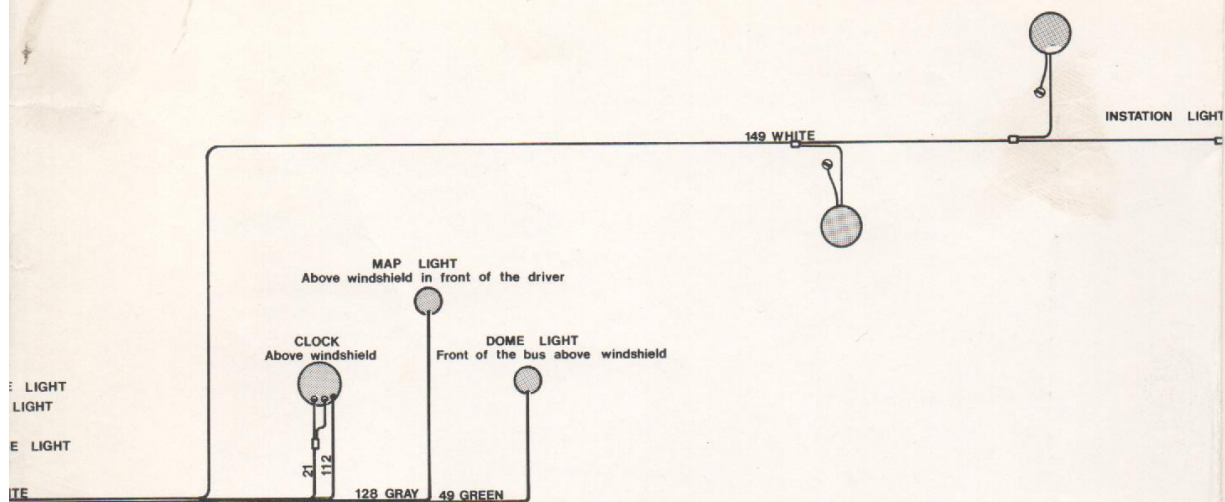


MASTER SWITCH LAYOUT


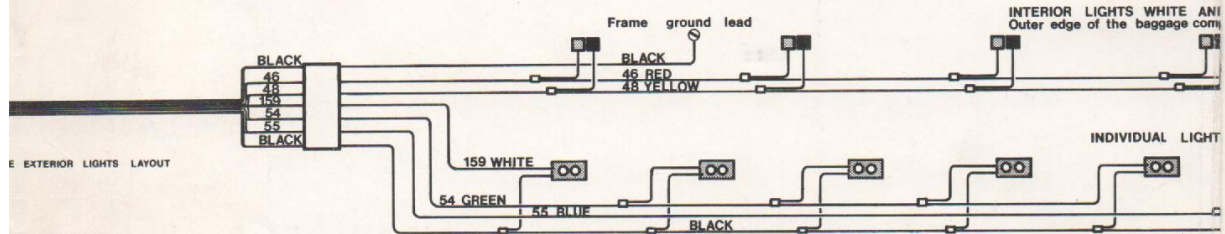
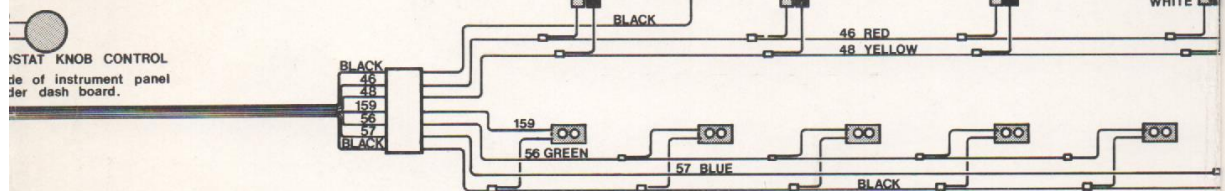


Relay	Terminal / Wire Number			
MAIN LIGHTING	86 / BLK	85 / 8	87 / 7	30 / 2
LEFT READING LIGHTS	86 / BLK	85 / 48	87 / 10	30 / 2
RIGHT READING LIGHTS	86 / BLK	85 / 48	87 / 9	30 / 2

 

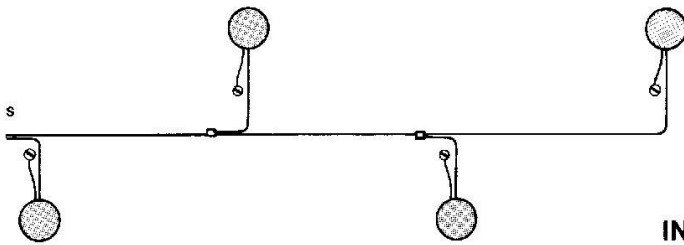


10D-15
INTERIOR LIGHTS LAYOUT

   

UNDER SEAT FLOOR LIGHTS
Under aisle seats on left side




GM1082

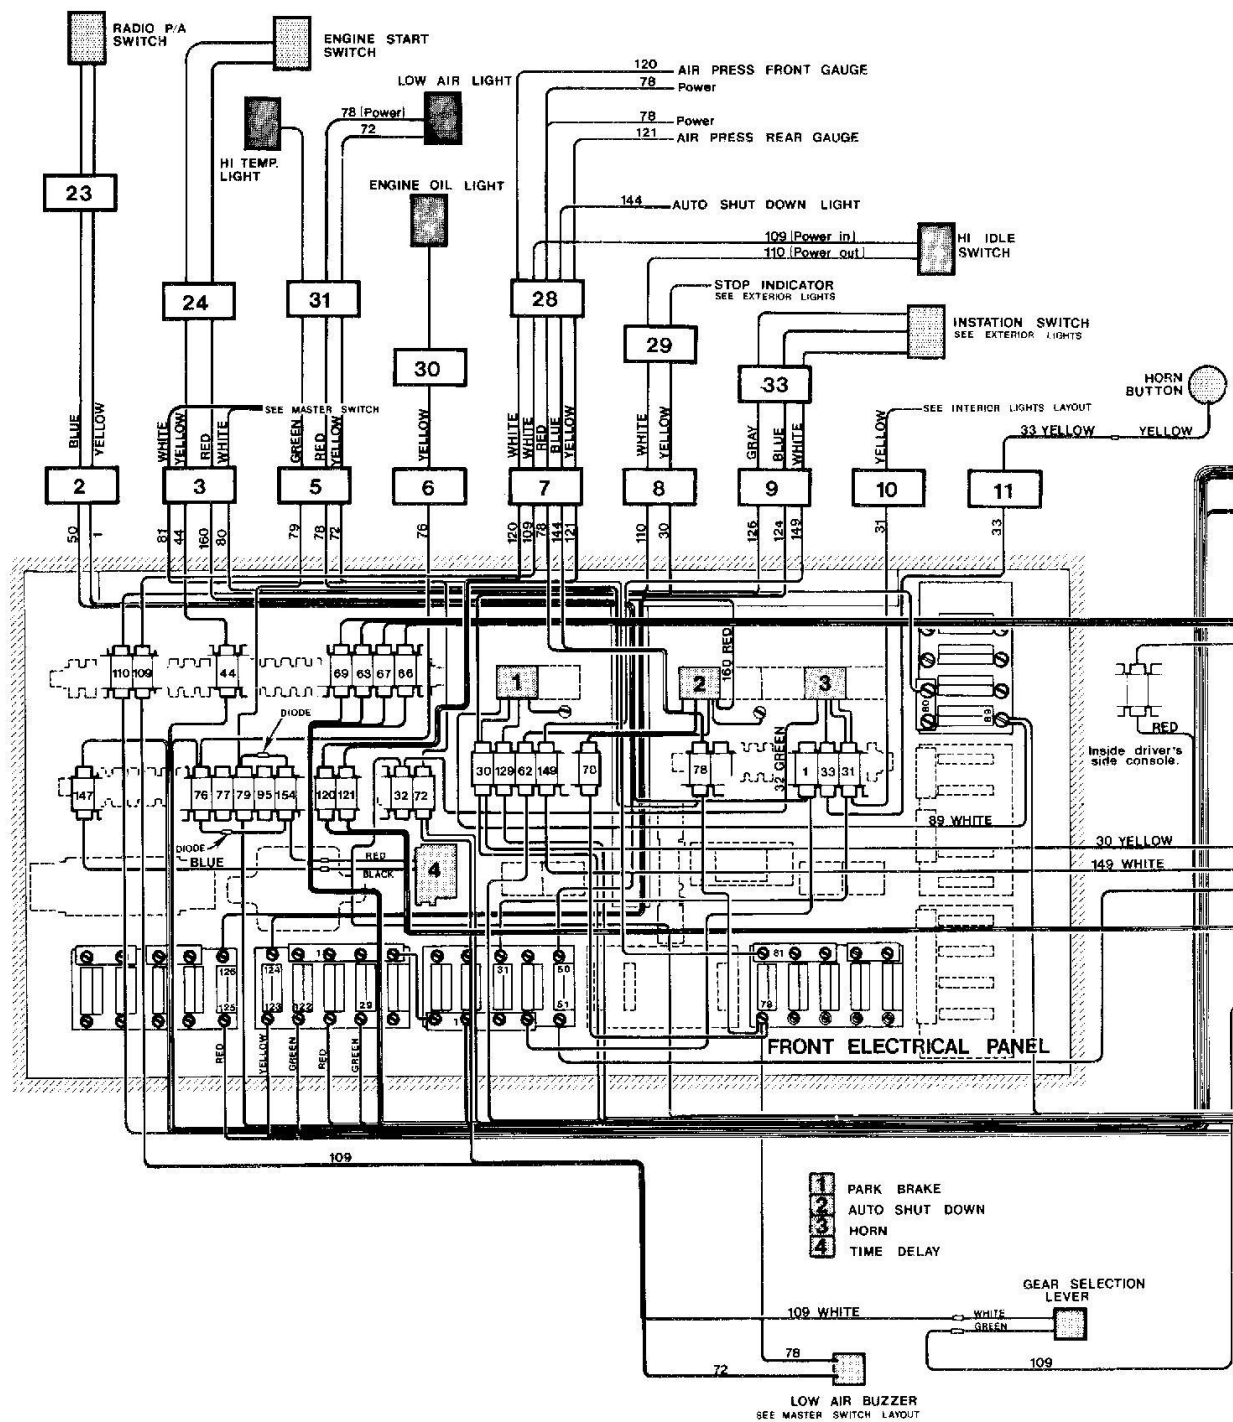




10D-21

INDICATOR LIGHTS & SYSTEMS I LAYOUT

Terminal / Wire Number									
E	86 / BLK	85 / 129	87 / 30	30 / 89					
DOWN	87A / 144	86 / BLK	85 / 62	87 / 160	30 / 78				
	86 / 33	85 / 31	87 / 32	30 / 31					
VALVE	86 / BLK	85 / 147	87A / 62	30 / 82					
PROTECTION	87A / BLK	86 / BLK	85 / 97	87 / OPEN	30 / 152				

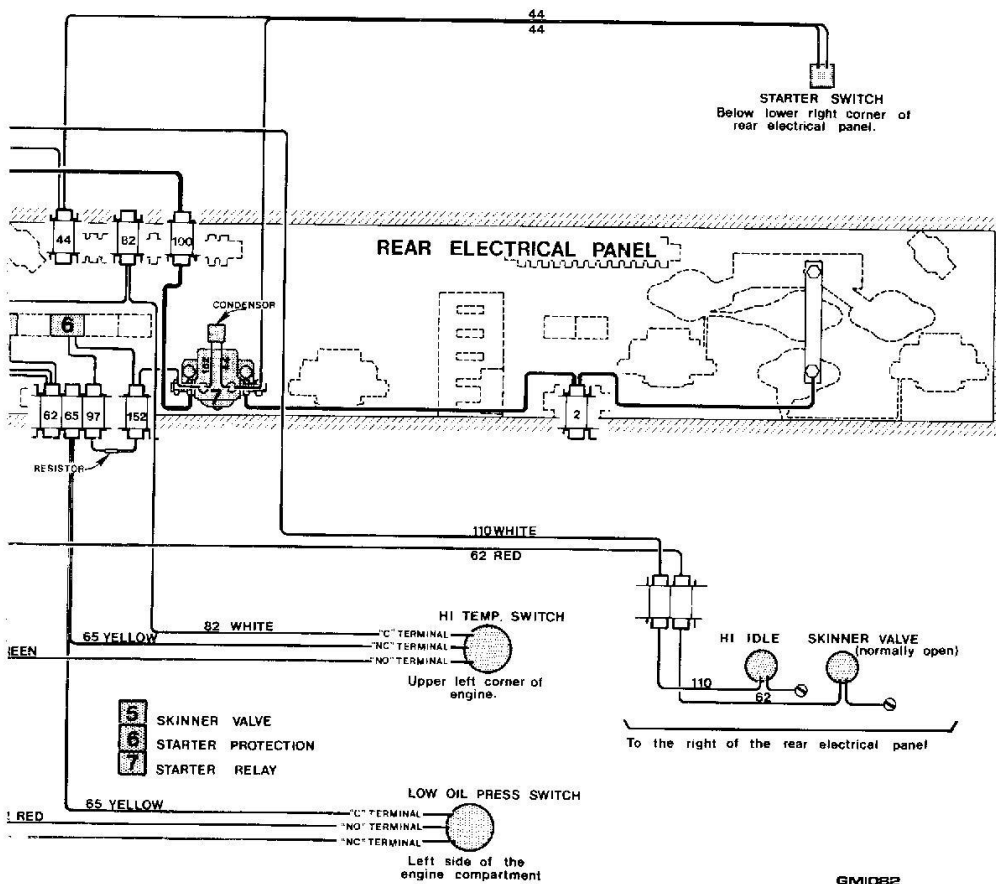

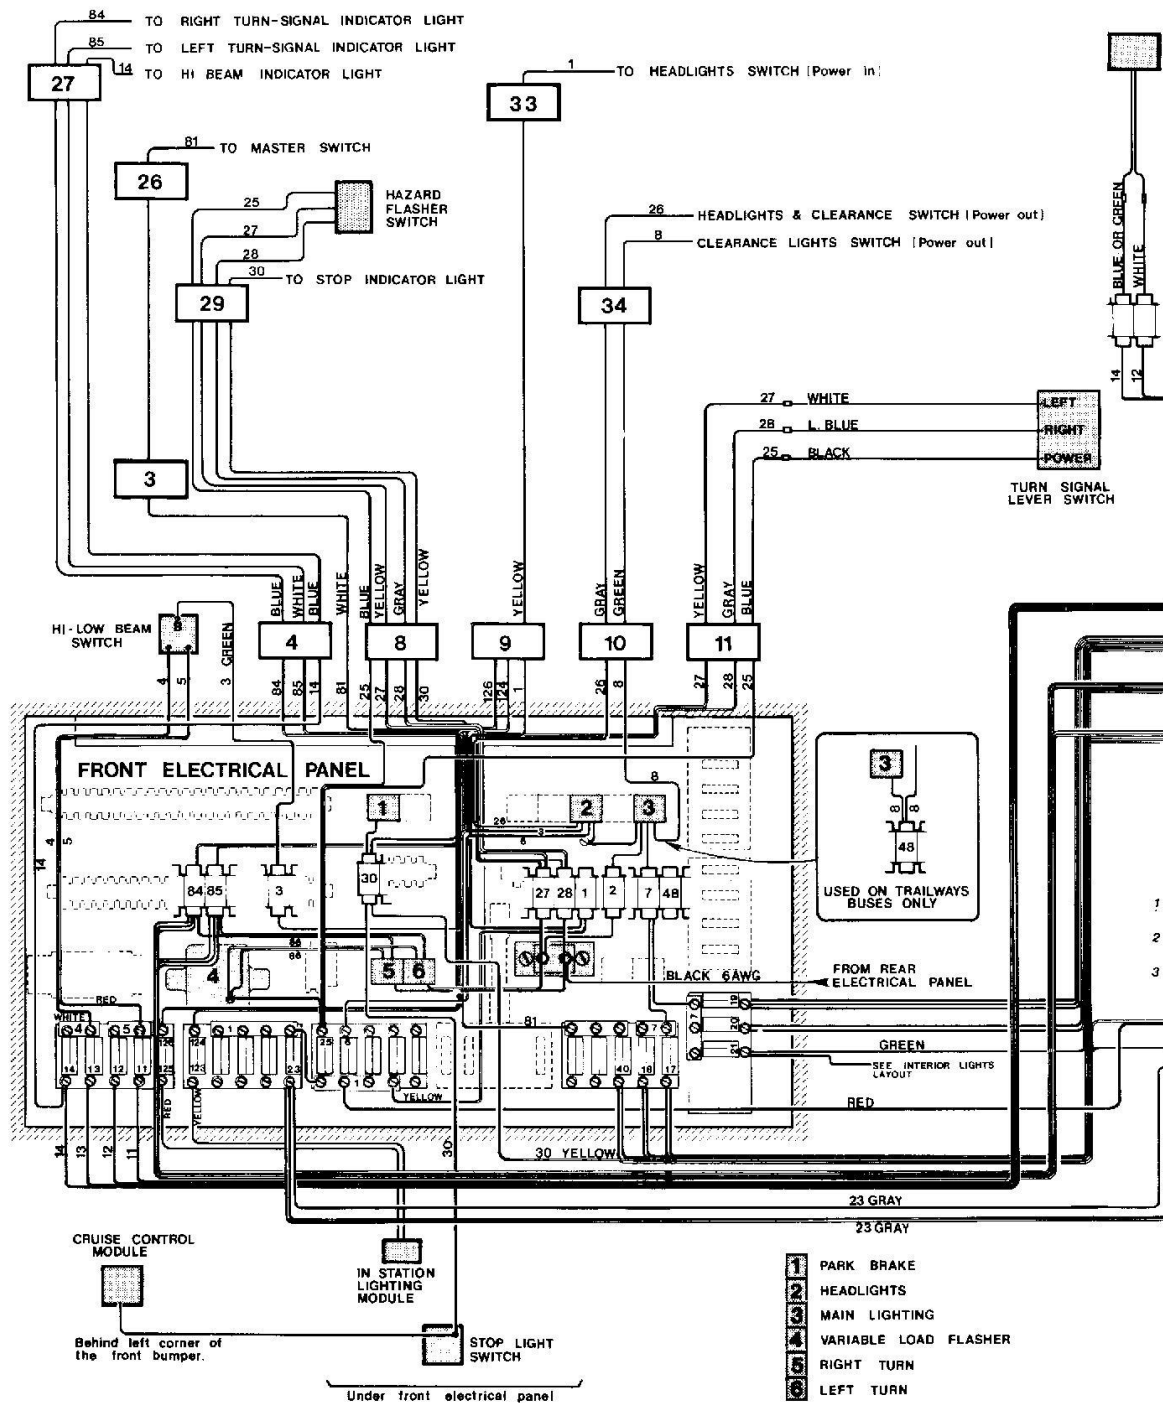


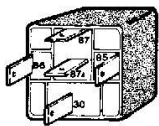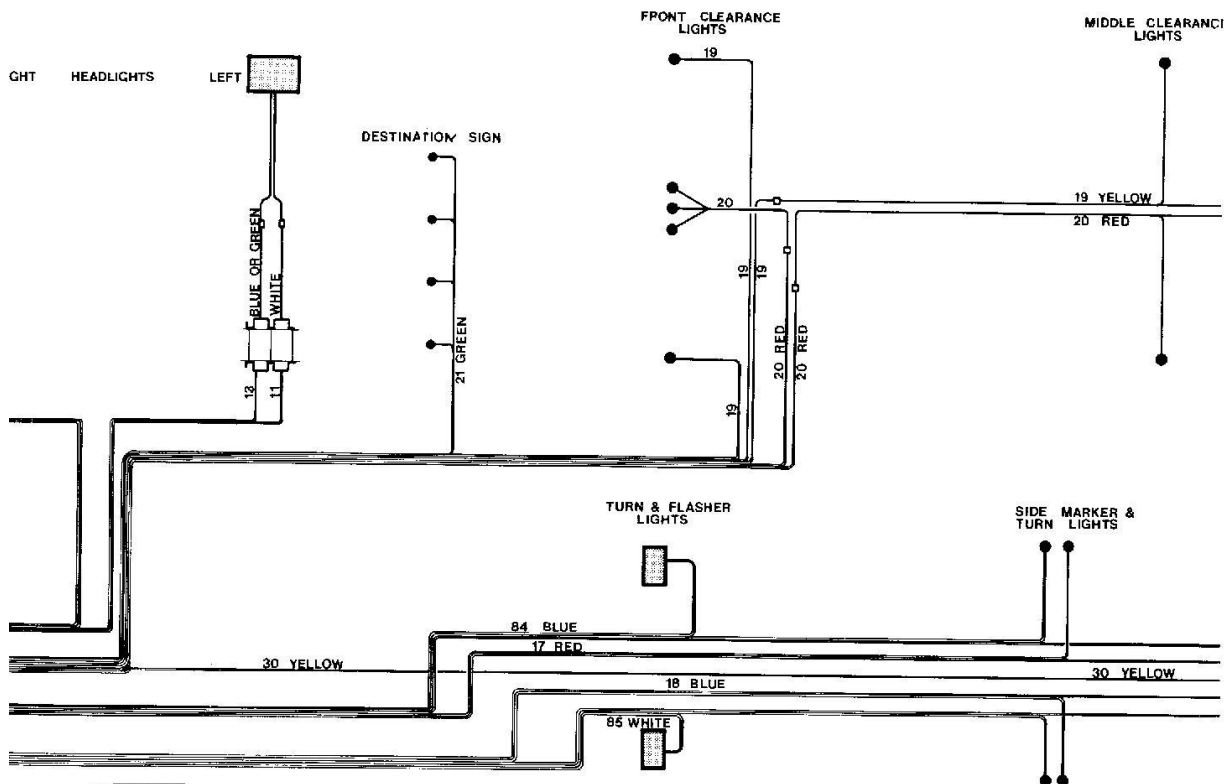


Power will flow from 85 to 86 then ground if activate the coil.
 Power will flow from 30 to 87A when it is not activated.
 Power will flow from 30 to 87 when it is activated.

Relay	Terminal / Wire Number				
PARK BRAKE	86 / BLK	85 / 129	87 / 30	30 / 89	
HEADLIGHTS	86 / BLK	85 / 26	87 / 3	30 / 6	
MAIN LIGHTING	86 / BLK	85 / 8	87 / 7	30 / 2	
RIGHT TURN	86 / BLK	85 / 28	87 / 84	30 / 86	
LEFT TURN	86 / BLK	85 / 27	87 / 85	30 / 86	

TRANSMISSION SWITCH
 Manual - on top
 Auto - on left side

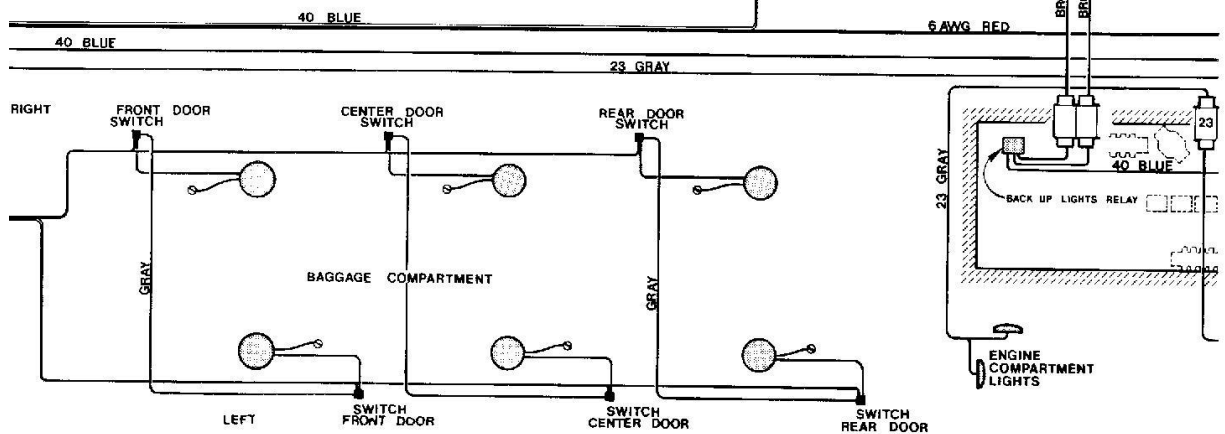



REAR CLEARANCE LIGHTS

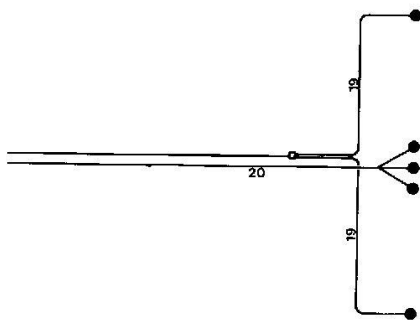

10D-11


EXTERIOR LIGHTS LAYOUT

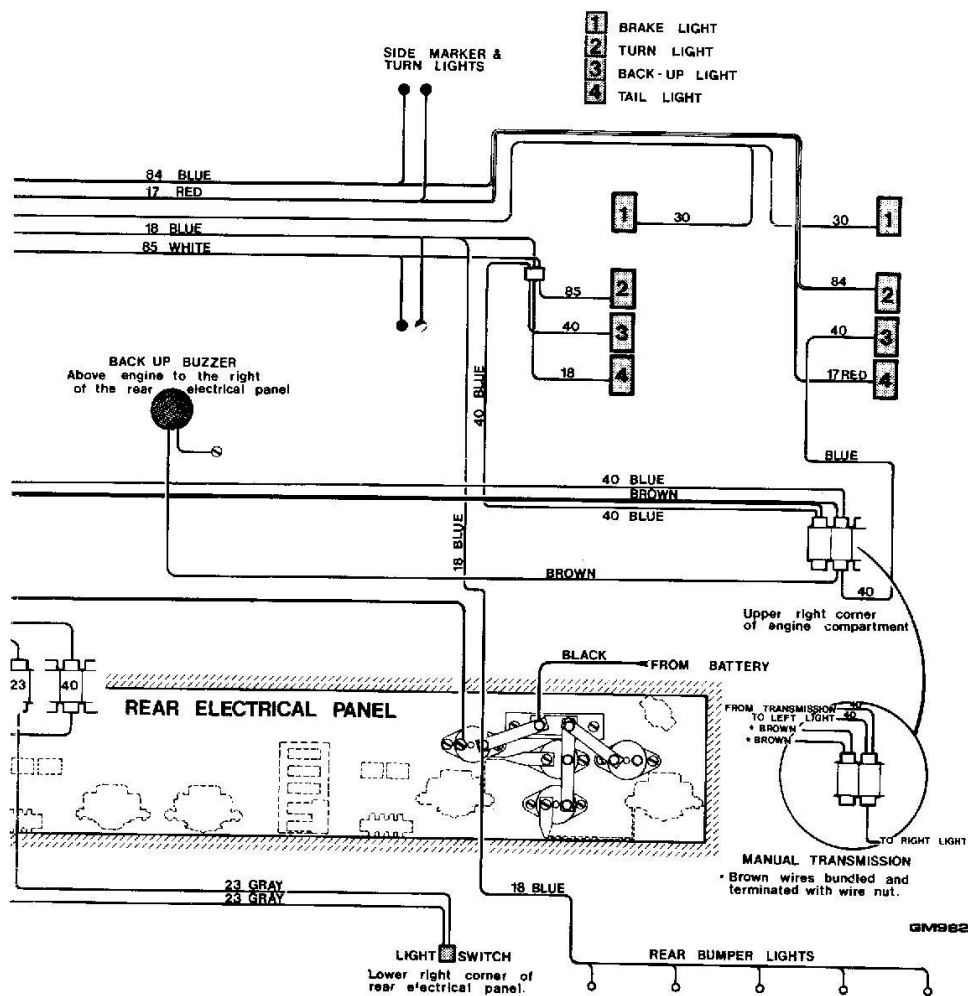

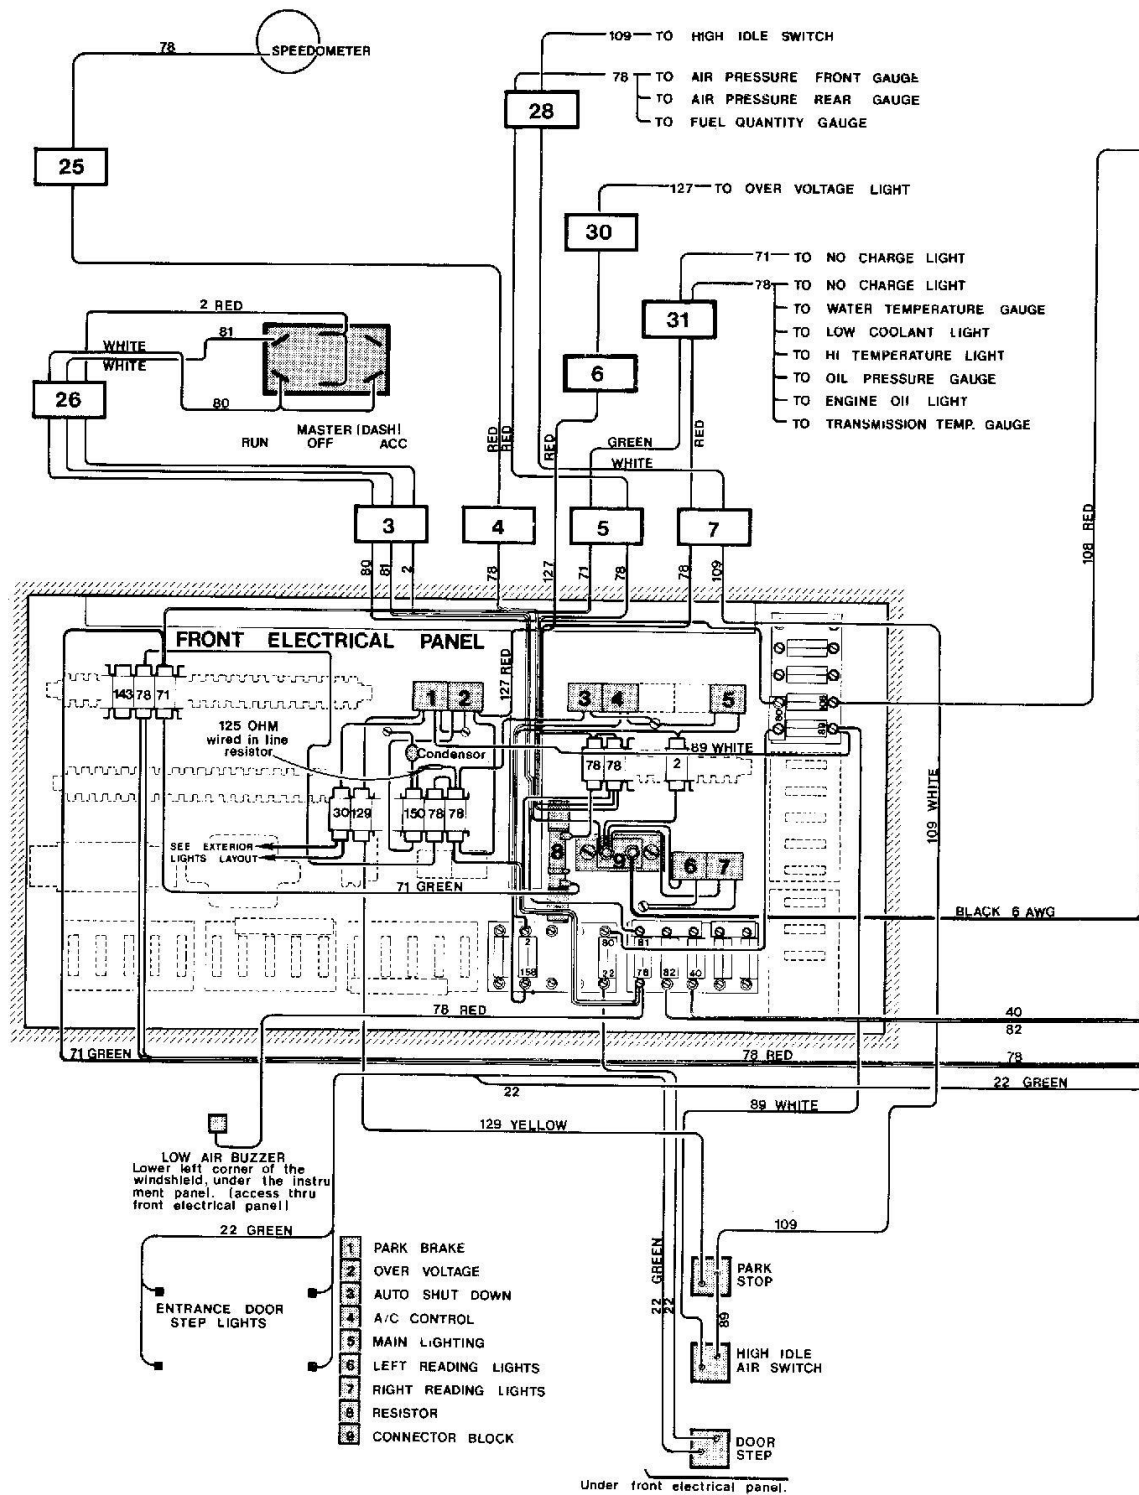


RESTROOM OCCUPIED
SIGN
Front of the bus above windshield.

108 RED
162 RED

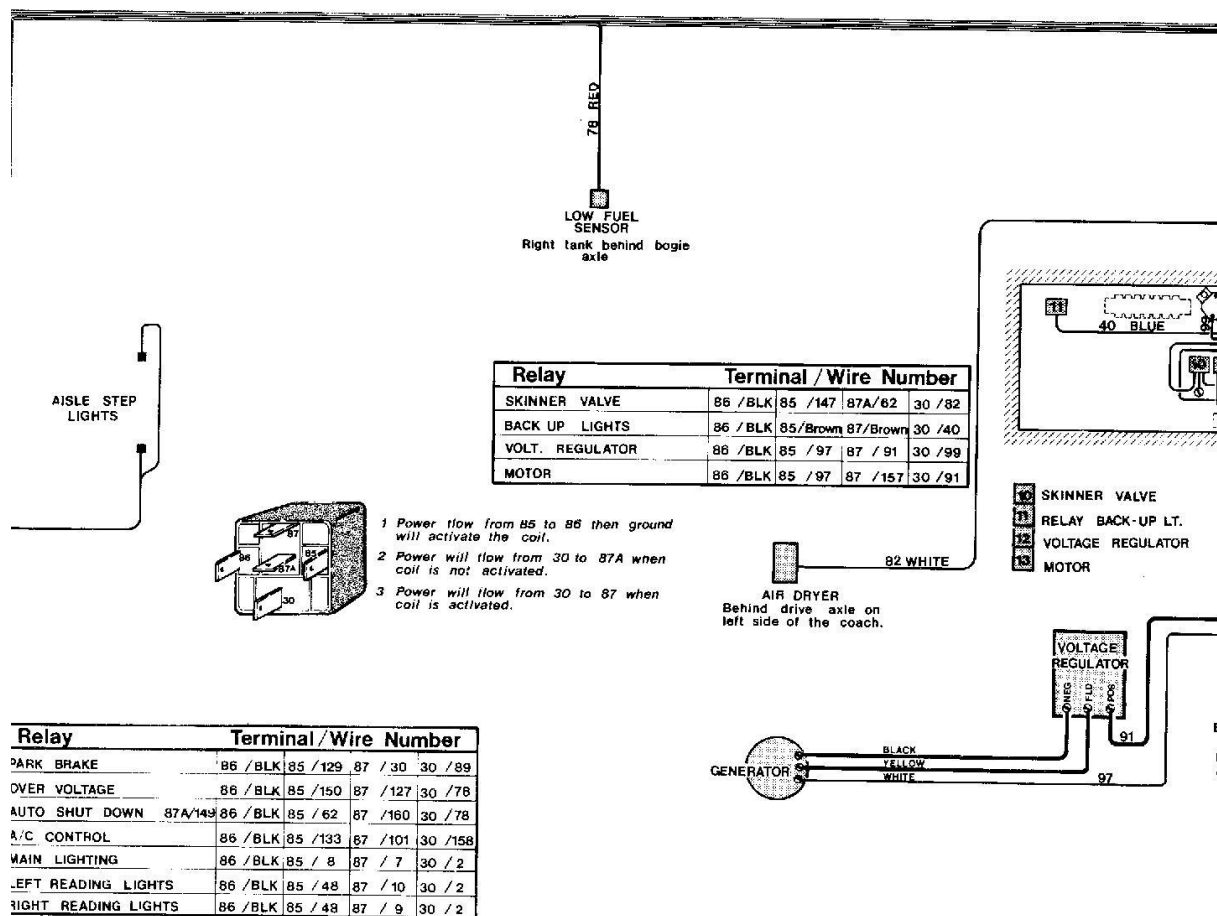

10D-5

MASTER SWITCH LAYOUT

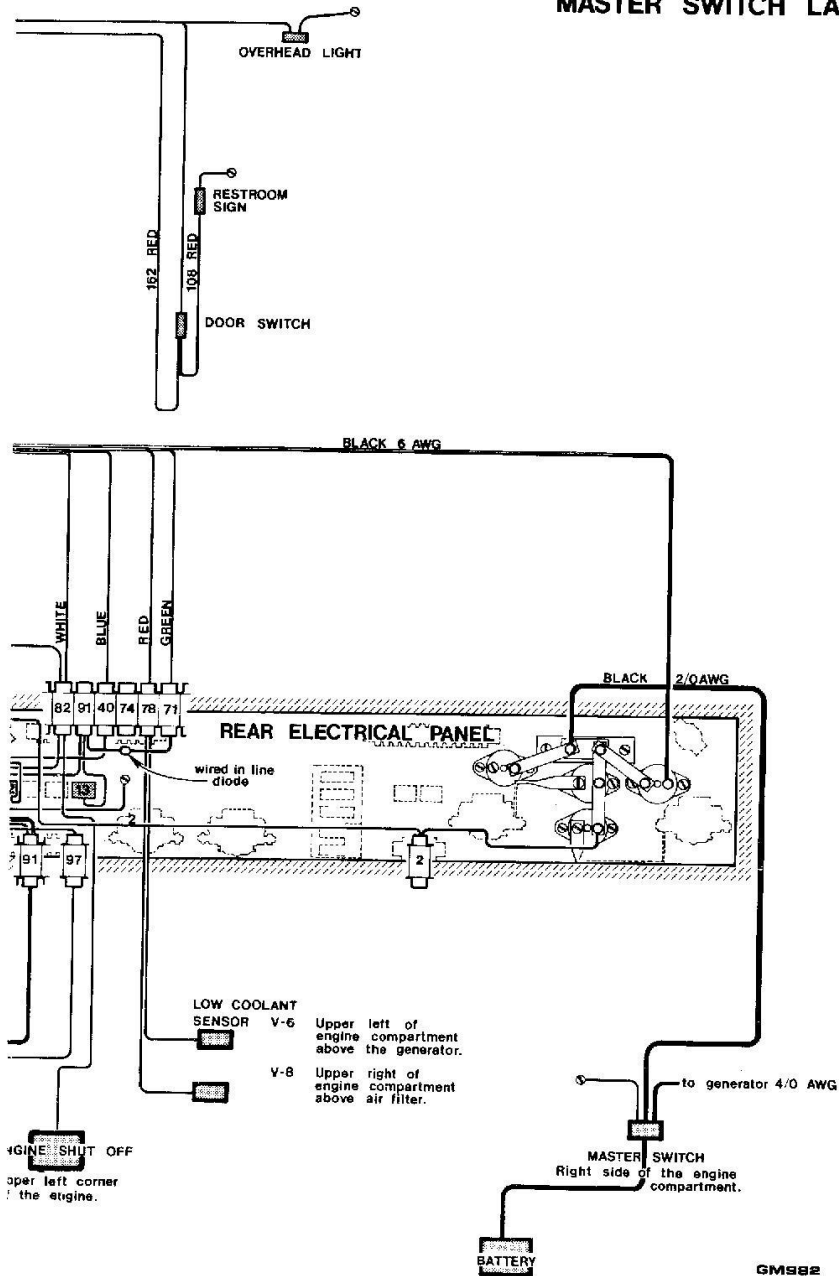

GM982

What Will Matter

By Michael Josephson

Ready or not, someday it will all come to an end.
There will be no more sunrises, no minutes, hours,
or days.

All the things you collected, whether treasured or
forgotten, will pass to someone else.

Your wealth, fame, and temporal power will shrivel
to irrelevance.

It will not matter what you owned or what you
were owed.

Your grudges, resentments, frustrations, and
jealousies will finally disappear.

So too, your hopes, ambitions, plans, and to-do
lists will expire.

The wins and losses that once seemed so important
will fade away.

It won't matter where you came from or what side
of the tracks you lived on in the end.

It won't matter whether you were beautiful or
brilliant.

Even your gender and skin color will be irrelevant.

So what will matter? How will the value of your
days be measured?

What will matter is not what you bought but what
you built,

not what you got but what you gave.

What will matter is not your success but your
significance.

What will matter is not what you learned but what
you taught.

What will matter is every act of integrity,
compassion, courage, or sacrifice that enriched,
empowered, or encouraged others to emulate
your example.

What will matter is not your competence but your
character.

What will matter is not how many people you knew,
but how many will feel a lasting loss when you're
gone.


What will matter is not your memories of those
who loved you.

What will matter is how long you will be
remembered, by whom, and for what.

Living a life that matters doesn't happen by
accident.

It's not a matter of circumstance but of choice.

Choose to live a life that matters.

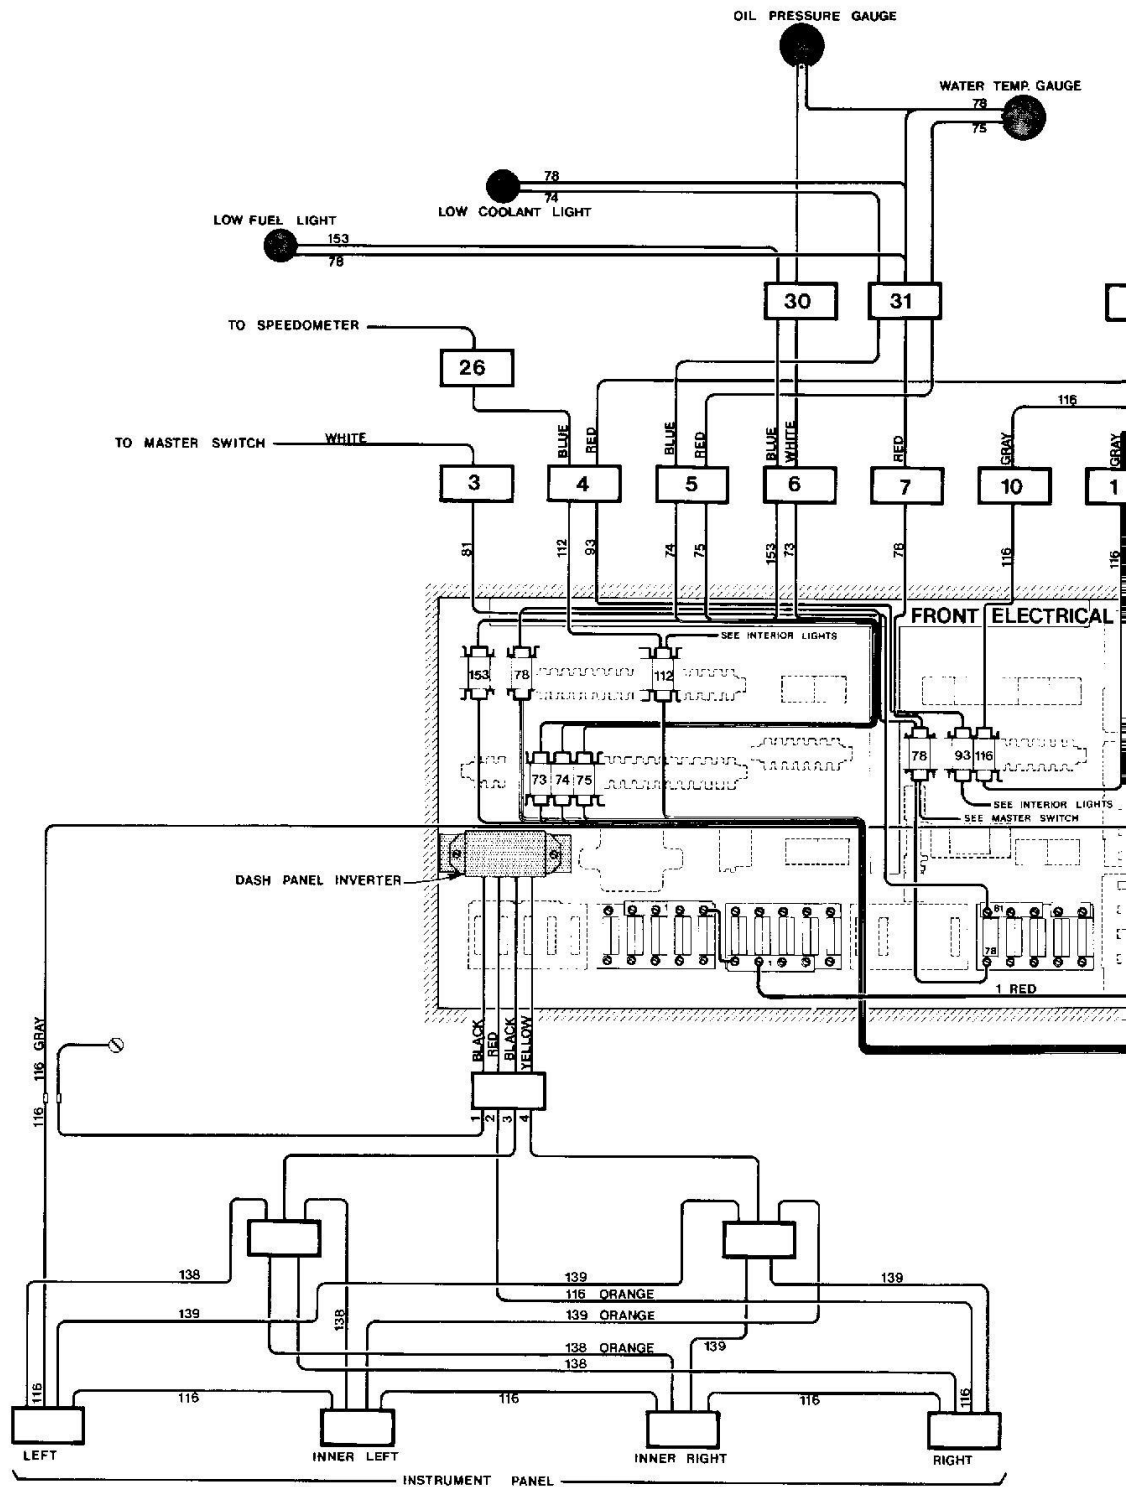

INTENSITY SWITCH

ANEL

TO MA
Right side

REAR ELECTRICAL PANEL

FROM REAR ELECTRICAL PANEL


74 BLUE
78 RED
LOW COOLANT SENSOR
SEE MASTER SWITCH LAYOUT.


73 WHITE



OIL PRESSURE SENSOR
Left side of engine compartment

153 BLUE
78 RED
LOW FUEL SENSOR
Right tank behind bogie axle.

INDICATOR LIGHTS & SYSTEMS II
LAYOUT

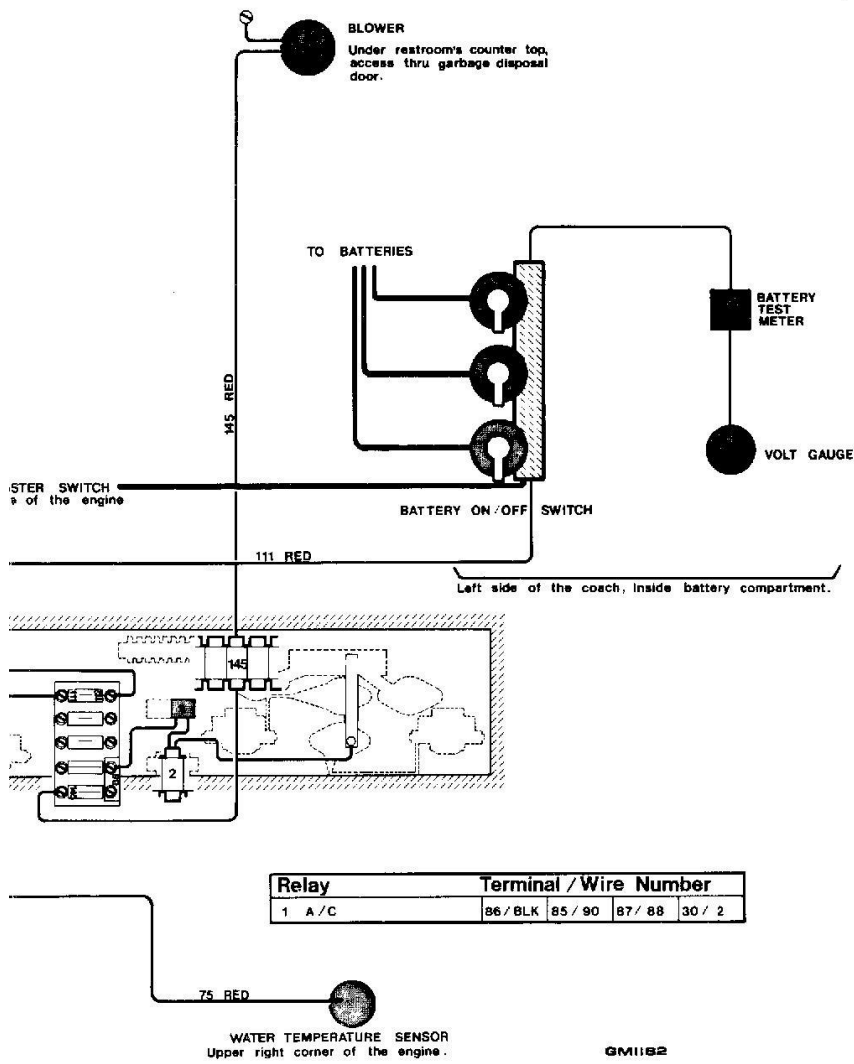


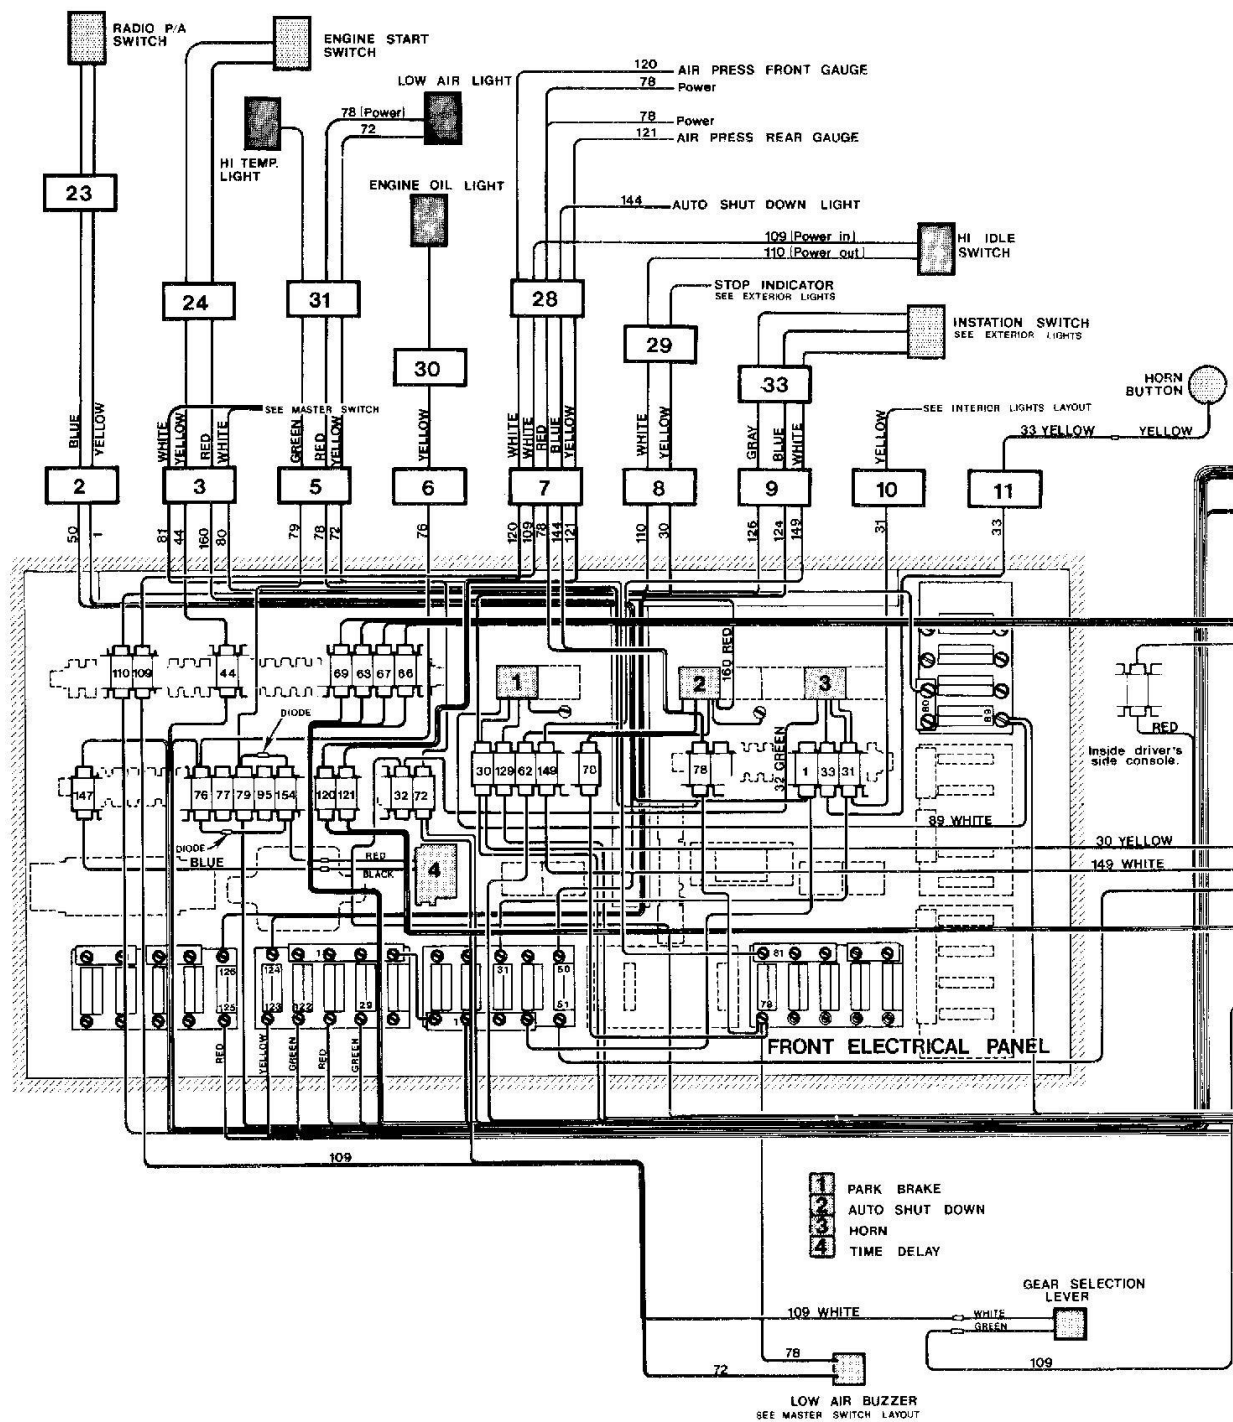

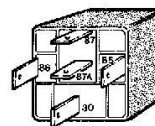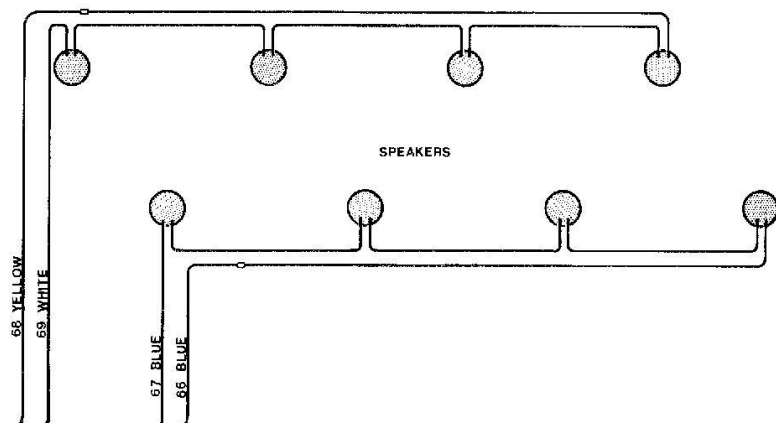

Relay
PARK BRAK
AUTO SHUT
HORN
SKINNER V/
STARTER PRK


- 1 Power flow from 85 to 86 then ground will activate the coil.
- 2 Power will flow from 30 to 87A when coil is not activated.
- 3 Power will flow from 30 to 87 when coil is activated.

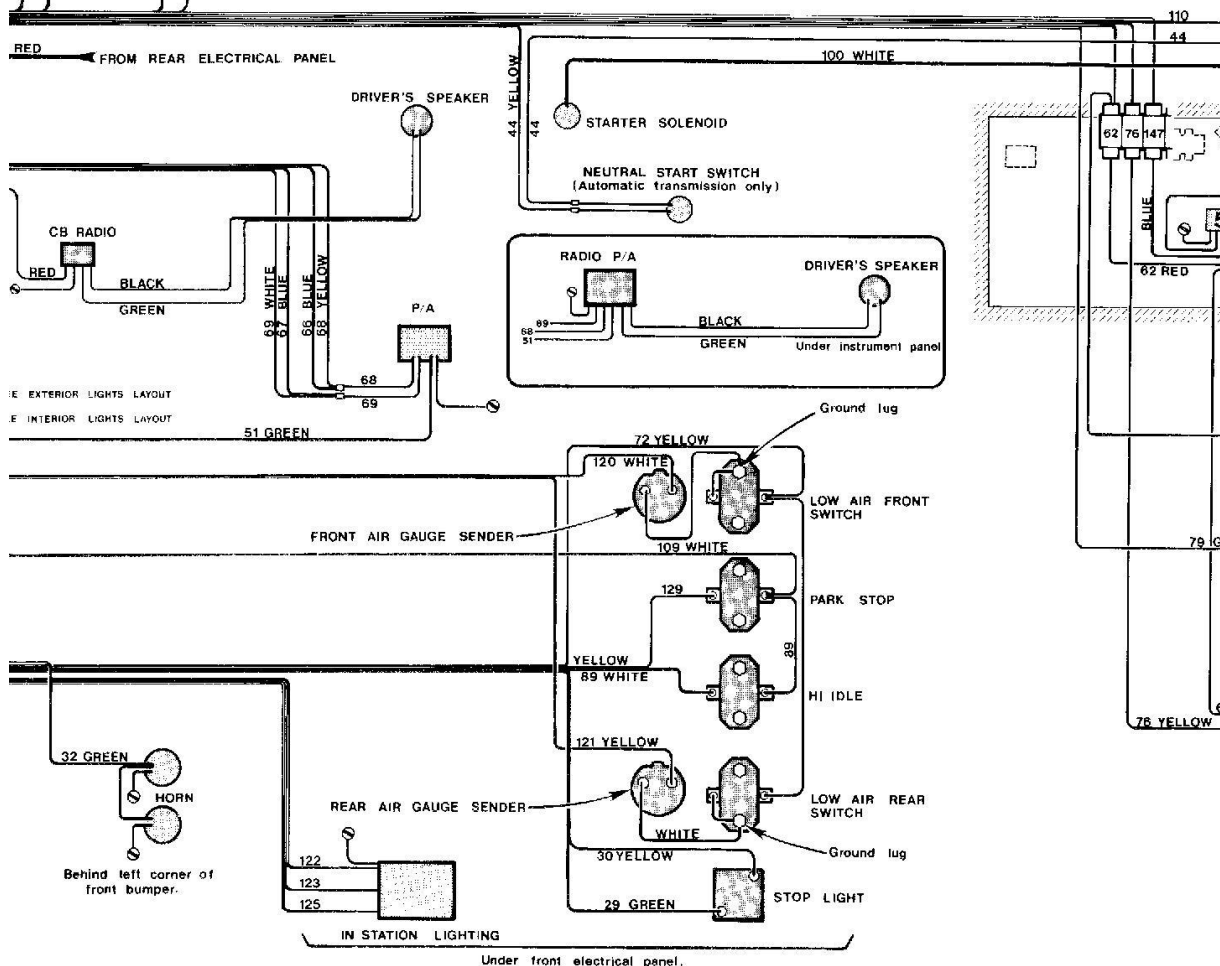


10D-21



INDICATOR LIGHTS & SYSTEMS I LAYOUT

Terminal / Wire Number							
E	86 / BLK	85 / 129	87 / 30	30 / 89			
DOWN	87A / 144	86 / BLK	85 / 62	87 / 160	30 / 78		
	86 / 33	85 / 31	87 / 32	30 / 31			
VALVE	86 / BLK	85 / 147	87A / 62	30 / 82			
PROTECTION	87A / BLK	86 / BLK	85 / 97	87 / OPEN	30 / 152		

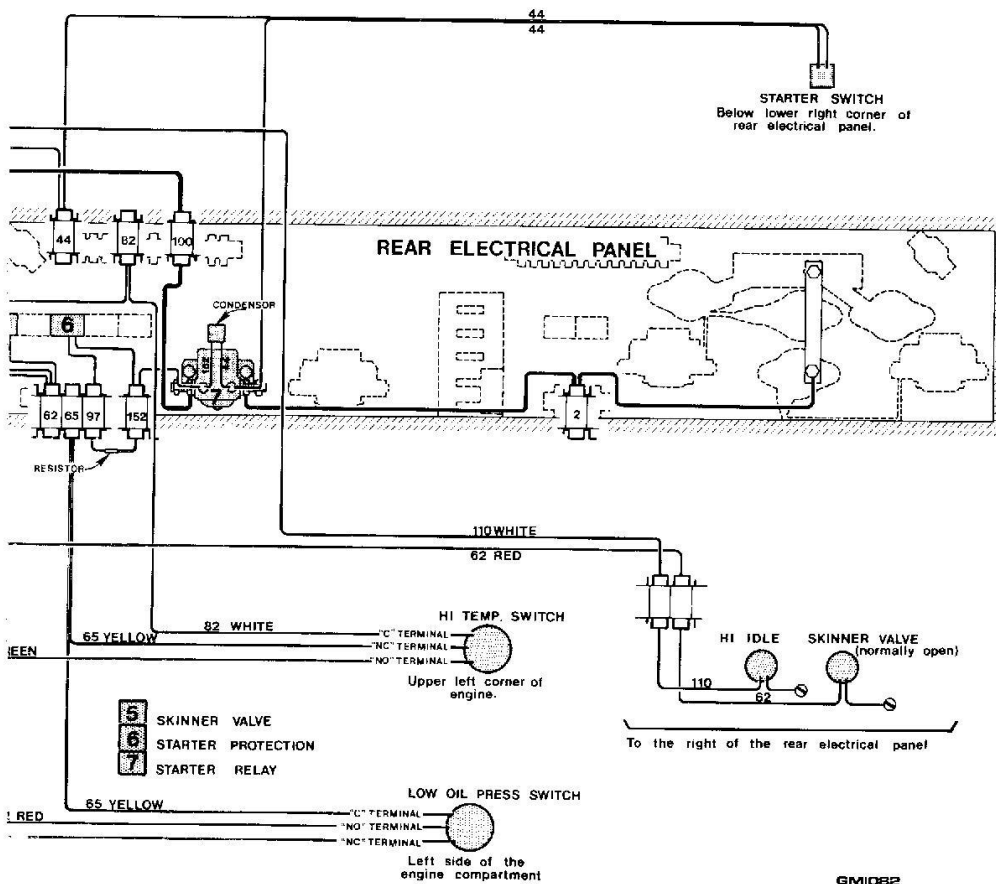

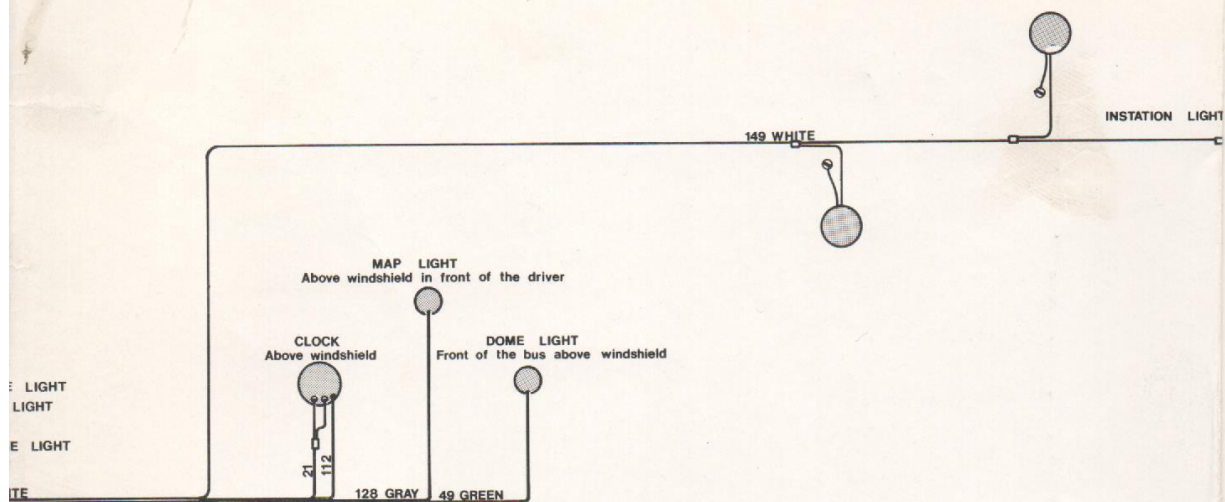


MASTER SWITCH LAYOUT


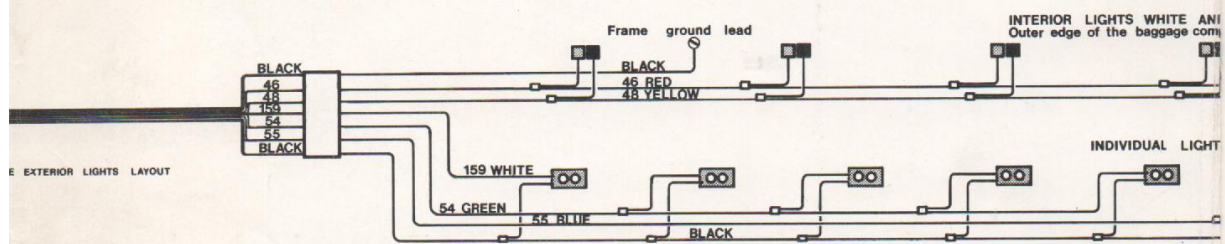
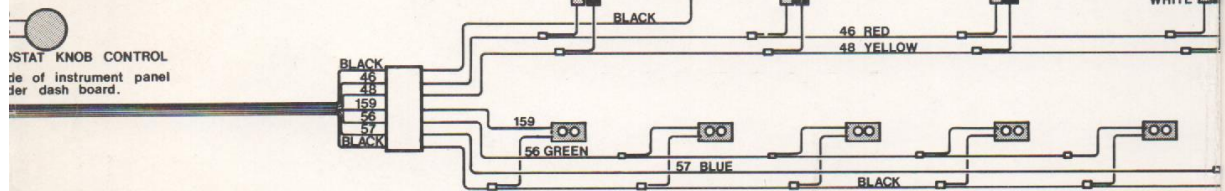


Relay	Terminal / Wire Number			
MAIN LIGHTING	86 / BLK	85 / 8	87 / 7	30 / 2
LEFT READING LIGHTS	86 / BLK	85 / 48	87 / 10	30 / 2
RIGHT READING LIGHTS	86 / BLK	85 / 48	87 / 9	30 / 2



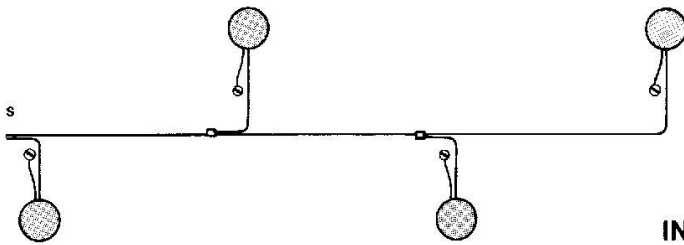


10D-15
 INTERIOR LIGHTS LAYOUT

   

UNDER SEAT FLOOR LIGHTS
 Under aisle seats on left side




GM1082

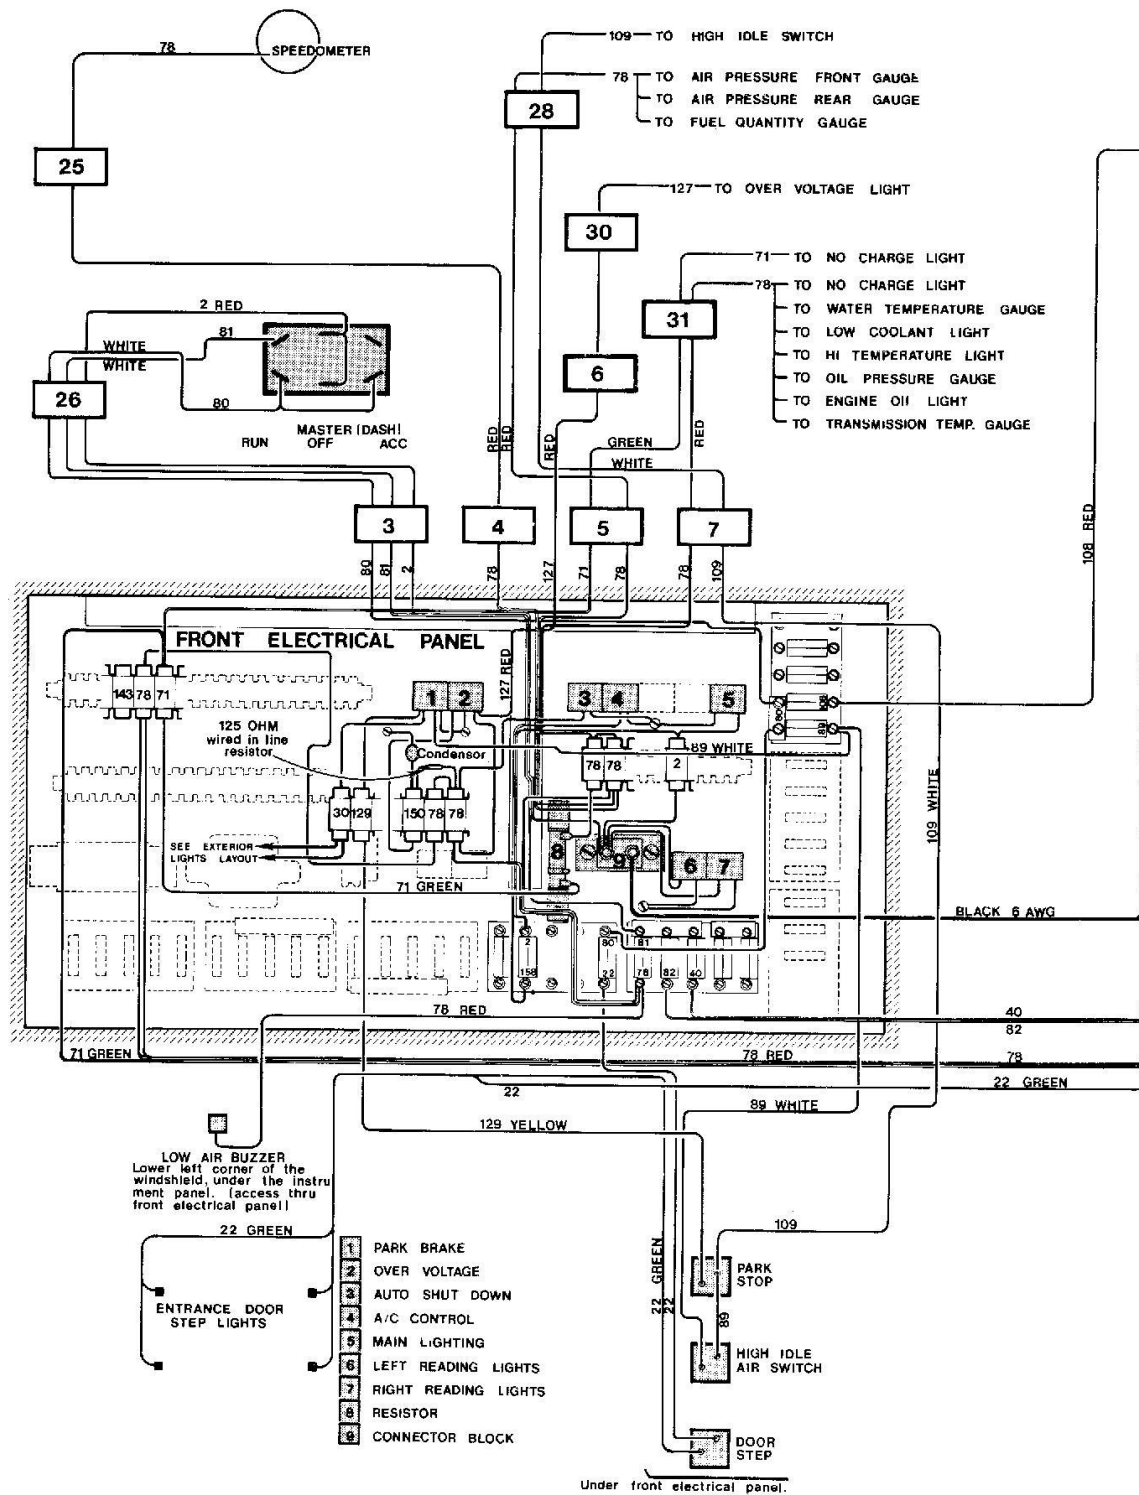

RESTROOM OCCUPIED
SIGN
Front of the bus above windshield.

108 RED
162 RED

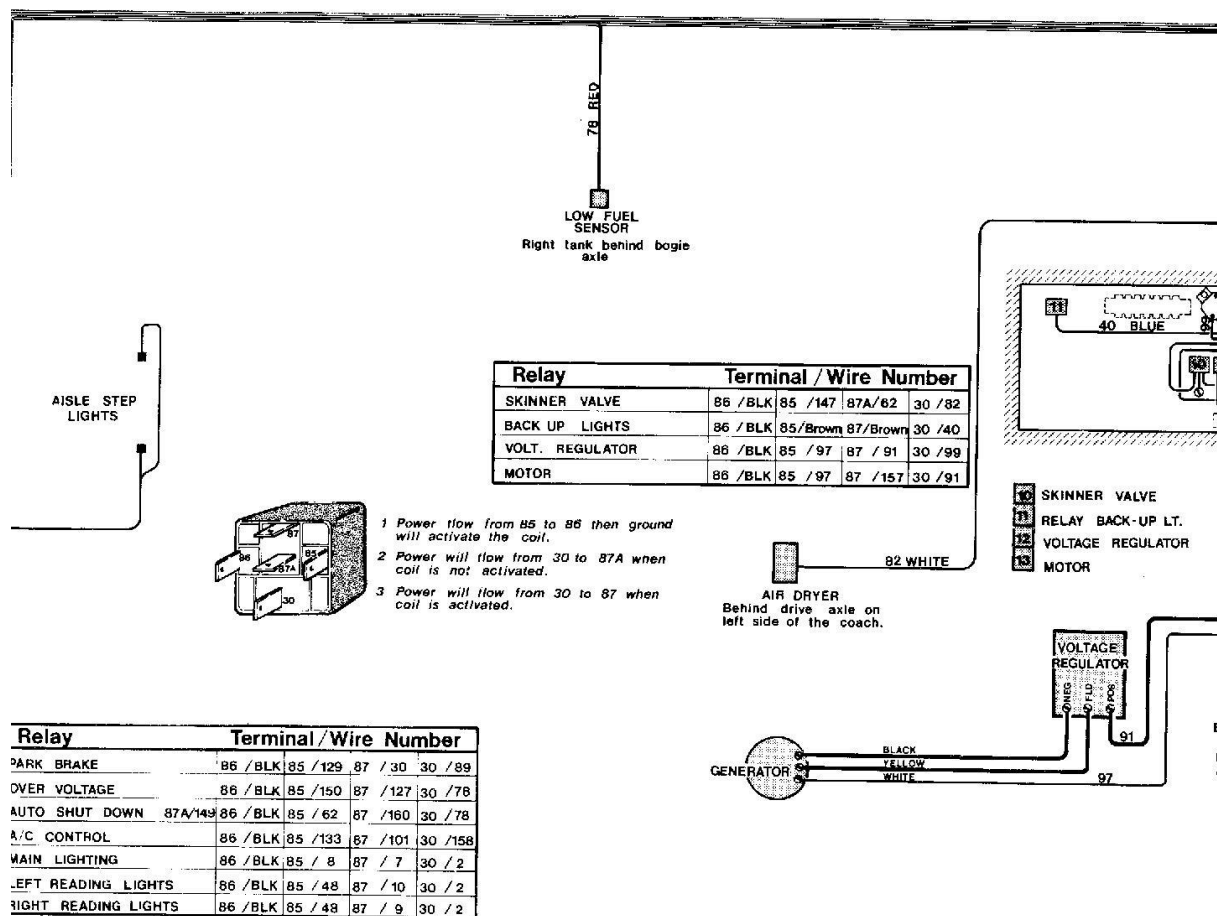

10D-5

MASTER SWITCH LAYOUT

